

Installation Guideline for Windows Versions higher than XP

Download the "QuickFil_5.1.zip" file from the OMICRON Lab homepage.


<http://www.omicron-lab.com/downloads.html>

Unzip the file to a temporary folder.

Activate the Compatibility mode for the "setup.exe" file.

To do so, right click on "setup.exe" then left click on "properties".

In the properties window, switch to the "compatibility" tab and activate the compatibility mode by setting the checkbox as shown in the picture below:

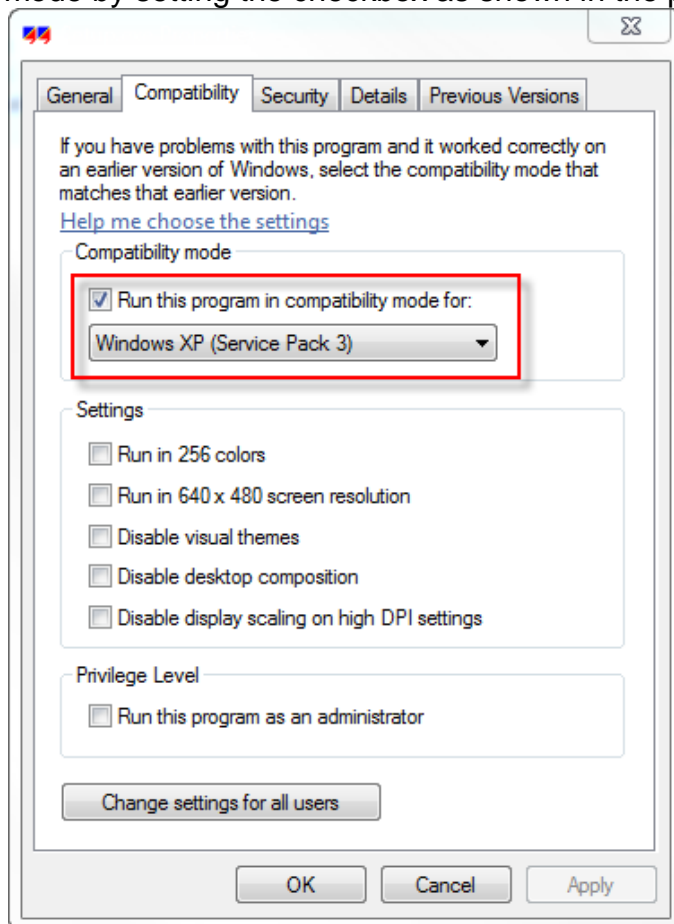


Then execute "setup.exe" and follow the installation process.

Install the software to a program folder (e.g. to C:\QuickFil)

Note: As you need to start the software later on in a DOS command line it is preferable to use a short path and short folder names!


Once the setup is complete please deactivate the launch checkbox and press "Finish".

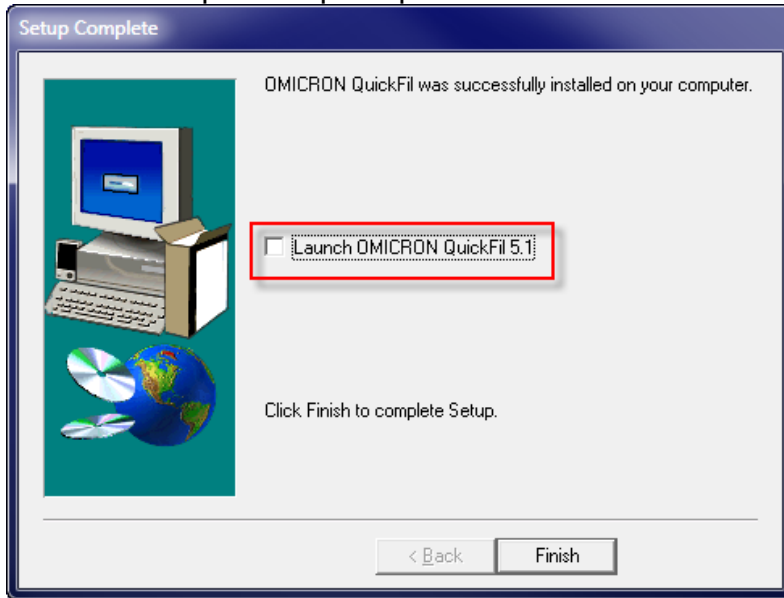


After the installation please do **NOT** start the program.
To enable the program to work in Windows you first need to install "DOSBox". This is a free emulator software that allows to run dos based software on modern systems.

Please download "DOSBox" (<http://www.dosbox.com>) and install it.

You can now start DOSBox, mount the QuickFil index and start QuickFil per "QF.EXE".

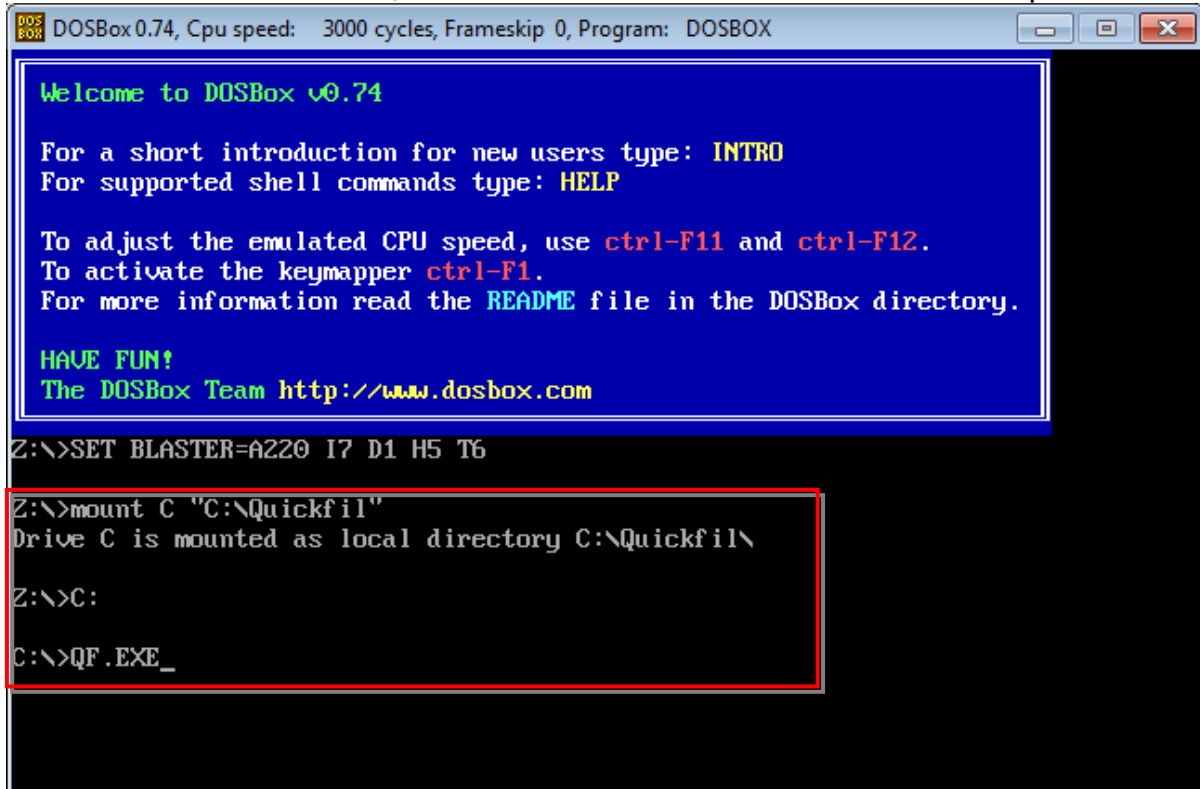

QuickFil under Windows 7 x64:

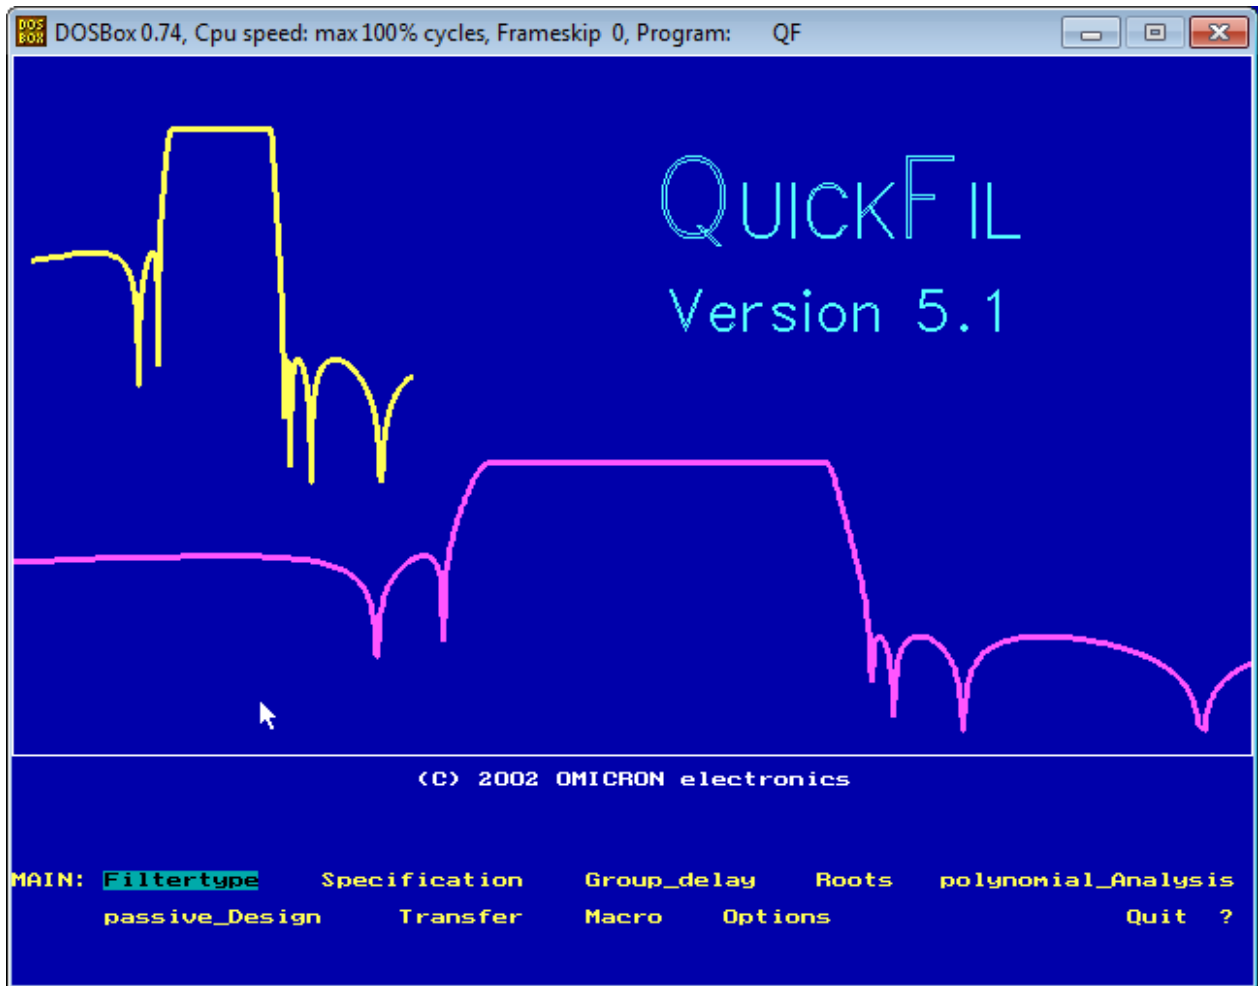

© 2010 by Omicron Lab
Visit www.omicron-lab.com for more information.
Contact support@omicron-lab.com for technical support.