The world of PCB clamping











CLM-1060

ClampMan Light is our entry level model.

It's mainly designed to clamp smaller PCBs or hold parts like relays, especially for soldering or repair.

It can also be used for tasks such as thermal imaging or with the optional top jaws for isolated measurements (ClampMan Light ISO).

It also enables fixing in many different positions with the same degrees of freedom as the ClampMan Classic does. So it also ensures nearly the same level of versatility for soldering, repair or assembly of printed circuit boards.

The base plate can support a maximum of four 300/400mm joint stands.



This product comprises the following parts:

Product.Id Description

CLM-1118 Round base plate 400mm joint stand CLM-1200 ClampMan vice








ClampMan Light ISO

CLM-1080

ClampMan Light ISO is also an entry level model.

It's mainly designed to clamp smaller PCBs, especially for isolated measuring. It can also be used for tasks such as thermal imaging.

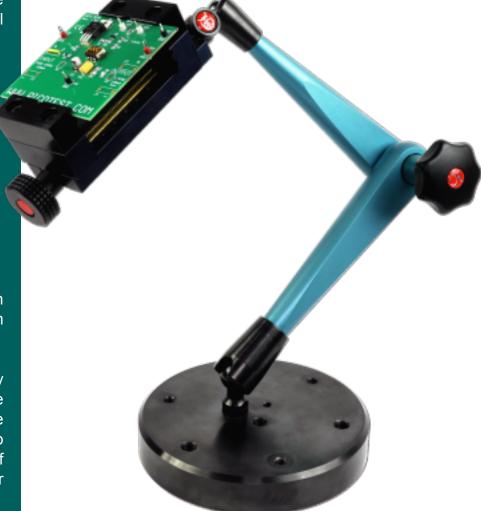

A good combination is to use it with a probeholder or a thermal cam mounted on a second joint stand.

It also enables fixing in many different positions with the same degrees of freedom as the ClampMan Classic does. So it also ensures nearly the same level of versatility for soldering, repair or assembly of printed circuit boards.

The base plate can support a maximum of four 300/400mm joint stands.


Product.Id	Description
CLM-1118	Round base plate
106327	400mm joint stand
CLM-1200	ClampMan vice
CLM-1207	2x Isolating Chuck





CLM-1207 Isolating Chucks

mounted on a vice CLM-1200 for isolated measuring

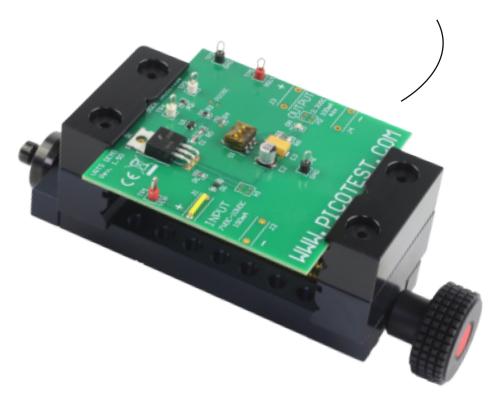

CLM-1050

ClampMan Probe is also an entry level model.

It's mainly designed to probe where you can't use the ClampMan. For example to probe into an opened PC onto a measurement card or on PCBs, which are already mounted into a case.

A good combination is to use it with a vice mounted on a second joint stand.

It also enables fixing in many different positions with the same degrees of freedom as the ClampMan Classic does.


The base plate can support a maximum of four 300/400mm joint stands.



Product.Id	Description
CLM-1118	Round base plate
106327	400mm joint stand
CLM-1110	Probe holder




Probe holder with adjustable pressure of probing tip

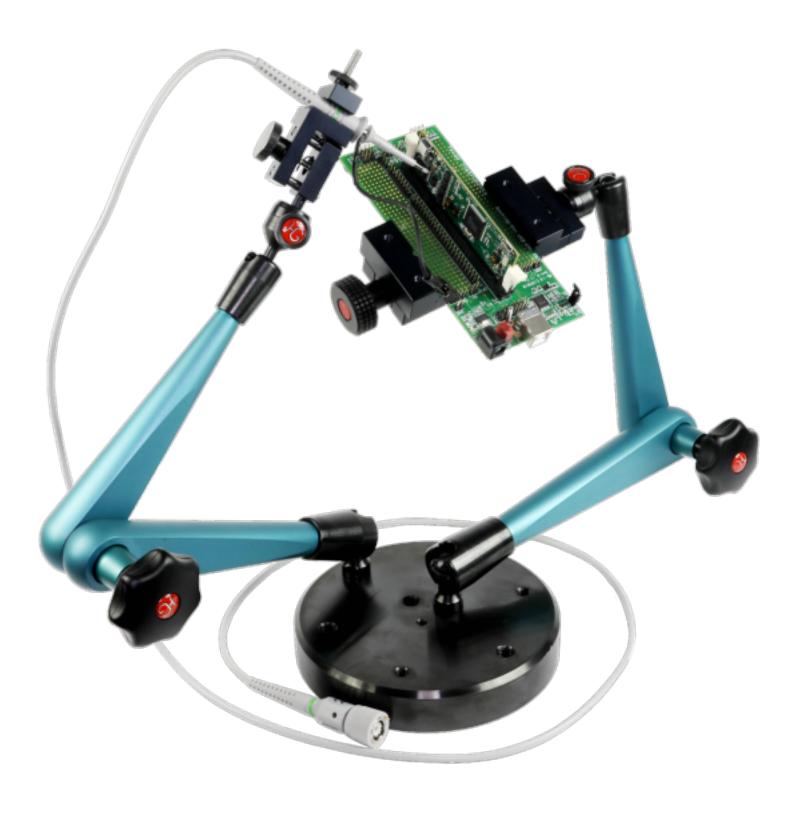

ClampMan Light And Probe in teamwork on a single base plate.

CLM-2000

The ClampMan Midi is our medium model.

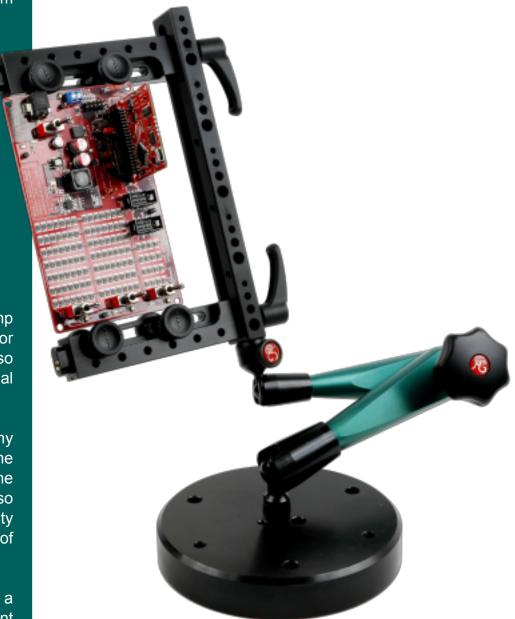

It's mainly designed to clamp midsize PCBs, especially for measuring or soldering. It can also be used for tasks such as thermal imaging.

It also enables fixing in many different positions with the same degrees of freedom as the ClampMan Classic does. So it also ensures the same level of versatility for soldering, repair or assembly of printed circuit boards.

The base plate can support a maximum of four 300/400mm joint stands.

The ClampMan Midi Plus includes a second joint stand (400er) and a probeholder



Product.Id	Description
CLM-1118	Round base plate
104352	300mm joint stand
CLM-2002	Midi clamp





Product.Id Des	cription
104352 300i 106327 400i CLM-1110 Prok	nd base plate mm joint stand mm joint stand peholder clamp

ClampMan Classic


CLM-1002

The ClampMan itself is a perfect solution for fixing PCBs of various shapes and formats in a large variety of different ways.

Due to its flexible design it is possible to perfectly position each PCB for tasks such as measuring, soldering or thermal imaging.

ClampMan was especially designed to clamp energized PCBs while enabling safe measurements from both sides. This is very helpful for power electronic measurements like measuring the power factor or efficiency of a power supply.

The provided clamping accessories enable fixing of printed circuit boards in many different positions with multiple degrees of freedom. This ensures an unsurpassed level of versatility for soldering, repair or assembly of printed circuit boards.

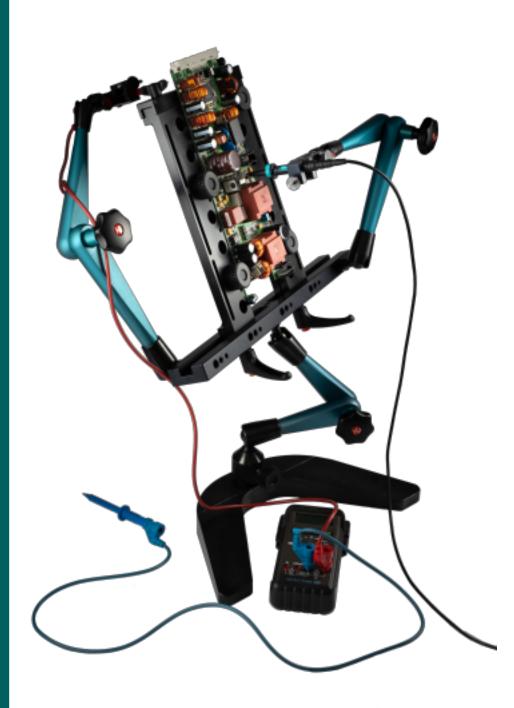

This product is available in following editions:

Product.Id Description

CLM-1001 ClampMan with 1 probing set (106328) CLM-1002 ClampMan with 2 probing sets (106328)












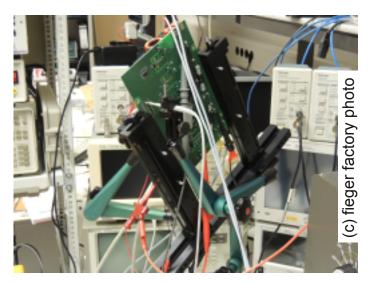

ClampMan integrates H&G's precise hydraulic joint stands which have been highly valued in processing and medical engineering industries for decades.

These joint stands allow exact positioning of measurement probes or other equipment like thermal imaging cameras.

In its basic version ClampMan comes with one or two hydraulic probe holder (CLM-1001, CLM-1002). Additional hydraulic joint stands are available as accessories.






Indispensable for ground clip probing!






Powerful hydraulic joint stands with quick change adapter for different tools or self-crafted gadgets available in 2 length



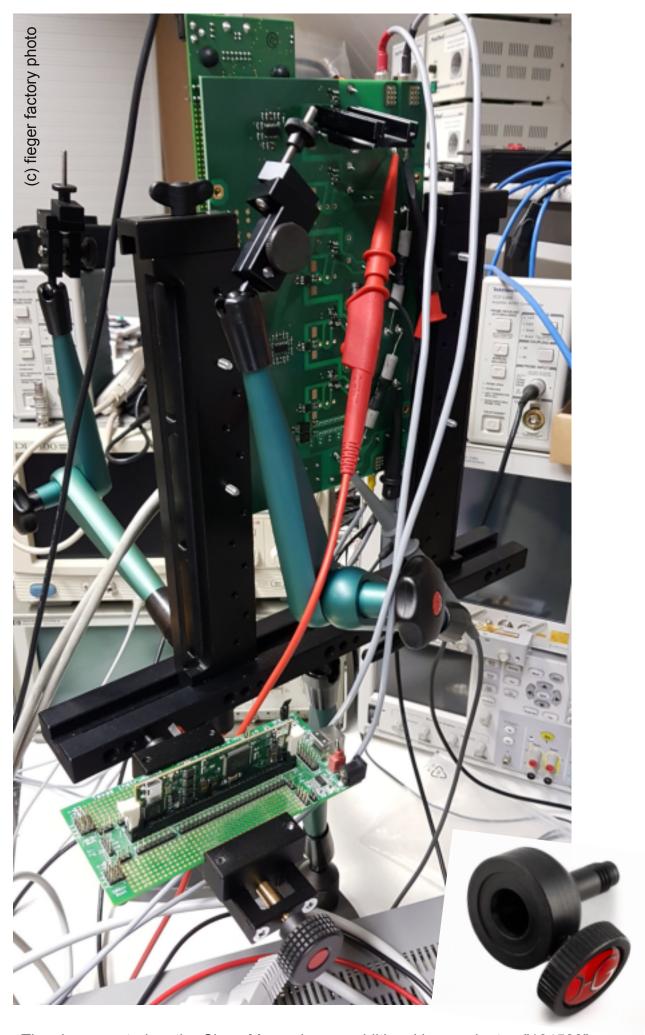

The vice mounted on the ClampMan using an additional base adapter "104500"

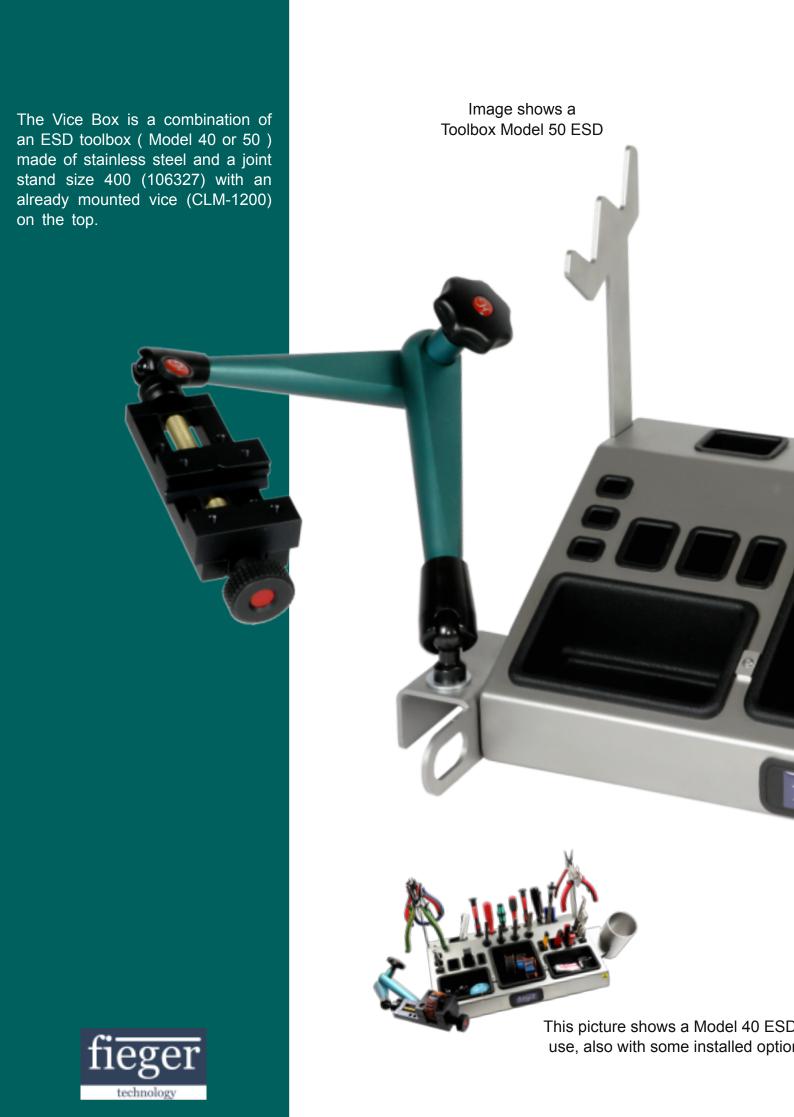





Shortly after the ClampMan went into production we saw the necessity to enable the 400m joint stand to support not only probe holders but also other tools, like tweezers or self-crafted gadgets.

This was realized by introducing our quick-change adapters.



85mm distance between the notches to hold a PC







104599 - QC Adapter set for retrofitting (104500 + 104511)



104500 - QC Base Adapter 6mm thread (standard)

104502 - QC Base Adapter 10mm thread



104511 - QC Adapter to M6 inner thread

104514 - QC Adapter to M3 inner thread



104512 - QC Adapter 4side block, bores M5, M6 + M5 inner thread



104507 - QC Adapter to M4 outer thread (b = 5 mm)

104508 - QC Adapter to M8 outer thread (b = 7 mm)

104509 - QC Adapter to M10 outer thread (b = 8 mm)


104510 - QC Adapter to M6 outer thread (b = 6 mm)



104506 - QC Adapter to 1/4"-20 (Cam - adapter, Whitworth thread) (b = 5 mm)



ible / ing tip

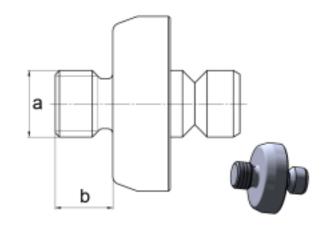

The "Accessory Sets" or "Multifunctional Sets" exist to encourage you to realize your own ideas or gadgets. You are also able to expand the basic features of the ClampMan Classic itself with this sets.

CLM-1070 ClampMan Accessory Set Professional



1x CLM-1207



1x CLM-1200



2x 106327 400mm



1x CLM-1118



2x 104



2x 104



2x 104



2x 104



2x 104



2x 104



2x 104



2x 104



Accessories



507



508



509



510



500




511



512



506

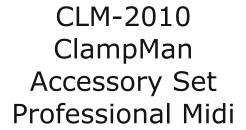



1x CLM-2002



1x 104352 300mm



1x 106327 400mm



1x CLM-1118



2x 104507





2x 104508





2x 104509





2x 104510





2x 104500





2x 104511






2x 104512





2x 104506

Now you are able to mount tools like tweezers, vices, magnifying glasses and also cameras for documenting or thermal imaging.

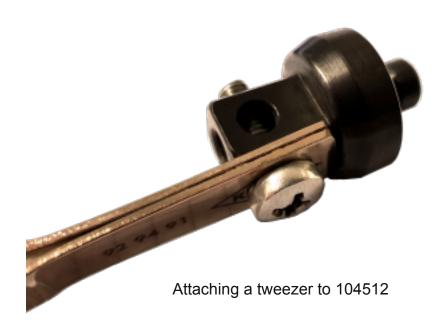





ClampMan Accessories



The world of PCB clamping



Idea by fieger consulting&softwaredesign

presented by:



clampman@fieger.technology www.clampman.info www.fieger.technology